



Model# BH199

# ***Read This Before Operating The BaseHit***

**FOR QUESTIONS/COMMENTS, PLEASE CALL (800) 492-9334**

## **IMPORTANT OPERATING INSTRUCTIONS**

**THE ACCURACY OF THE BASEHIT PITCHING MACHINE DEPENDS ON THE QUALITY, HARDNESS AND TYPE OF BALLS USED WITH THIS PRODUCT!**

**TREND SPORTS RECOMMENDS USING HEATER PITCHING MACHINE BALLS TO TEST THE BASEHIT'S ACCURACY AND PITCH SPEED. THESE BALLS ARE PRECISELY CRAFTED TO PROVIDE YOU WITH HOURS OF ACCURATE, TROUBLE FREE BATTING AND FIELDING PRACTICE.**

### **BaseHit Pitching Machine Balls**

**Heater Pitching Machine Balls are recommended for use with the BaseHit Pitching Machine.** These balls are the most accurate, long lasting, and produce less wear and tear on the BaseHit Pitching Machine. For peak performance, please purchase at least one dozen of these balls. This will improve your satisfaction with the BaseHit Pitching Machine.

**IF BALLS GET WET, THEY WILL NOT PITCH PROPERLY UNTIL THEY DRY.**

### **KNOWN FACTS ABOUT DIFFERENT BALLS:**

The speed and accuracy of each pitch is dependent on the hardness, roundness, and type of each ball used.

For example: If you have 12 balls and four are softer than the others (these balls will throw lower than the other balls), if four are harder than the others (these balls will throw higher than the other balls), and if four are not round (these balls will throw inside and outside). THIS LEAVES THE USER WITH THE IMPRESSION THE BASEHIT PITCHING MACHINE IS INACCURATE WHICH IS NOT CORRECT.

### **KNOWN PROBLEMS WITH THE FOLLOWING TYPES OF BALLS . . .**

#### **Simulated leather balls:**

These balls are usually a cheap, inexpensive ball and don't pitch very fast with the BaseHit. Because of the plastic simulated leather on these balls, consumers have thought the BaseHit was shooting out puffs of smoke. This is incorrect. The puffs of smoke come from these balls because every time they run through the machine, part of the cover gets turned into small dust particles and makes the consumer think these particles are puffs of smoke coming from the BaseHit; wherein reality, the puffs of dust (or sometimes confused as smoke) are actually coming from the simulated leather balls.

#### **Real leather balls:**

The BaseHit Pitching Machine should perform to your satisfaction as long as you purchase new, real leather balls. However, the accuracy of these balls vary more than with Heater Pitching Machine balls because of the seams on real balls.

# BaseHit™

## Pitching Machine Instructions


### IMPORTANT

**DO NOT RETURN THIS PITCHING MACHINE TO THE RETAIL STORE WHERE PURCHASED.  
CALL TOLL FREE: (800) 492-9334.**

### WARNING:

THIS PRODUCT IS TO BE USED BY ADULTS ONLY. MAKE SURE MACHINE IS TURNED OFF BEFORE ASSEMBLY! KEEP HANDS AND ALL BODY PARTS AWAY FROM BALL ENTRY AND EXIT! SERIOUS HAND AND BODILY INJURY MAY OCCUR IF USED INCORRECTLY!


### BASEBALL PITCHING MACHINE PARTS LIST

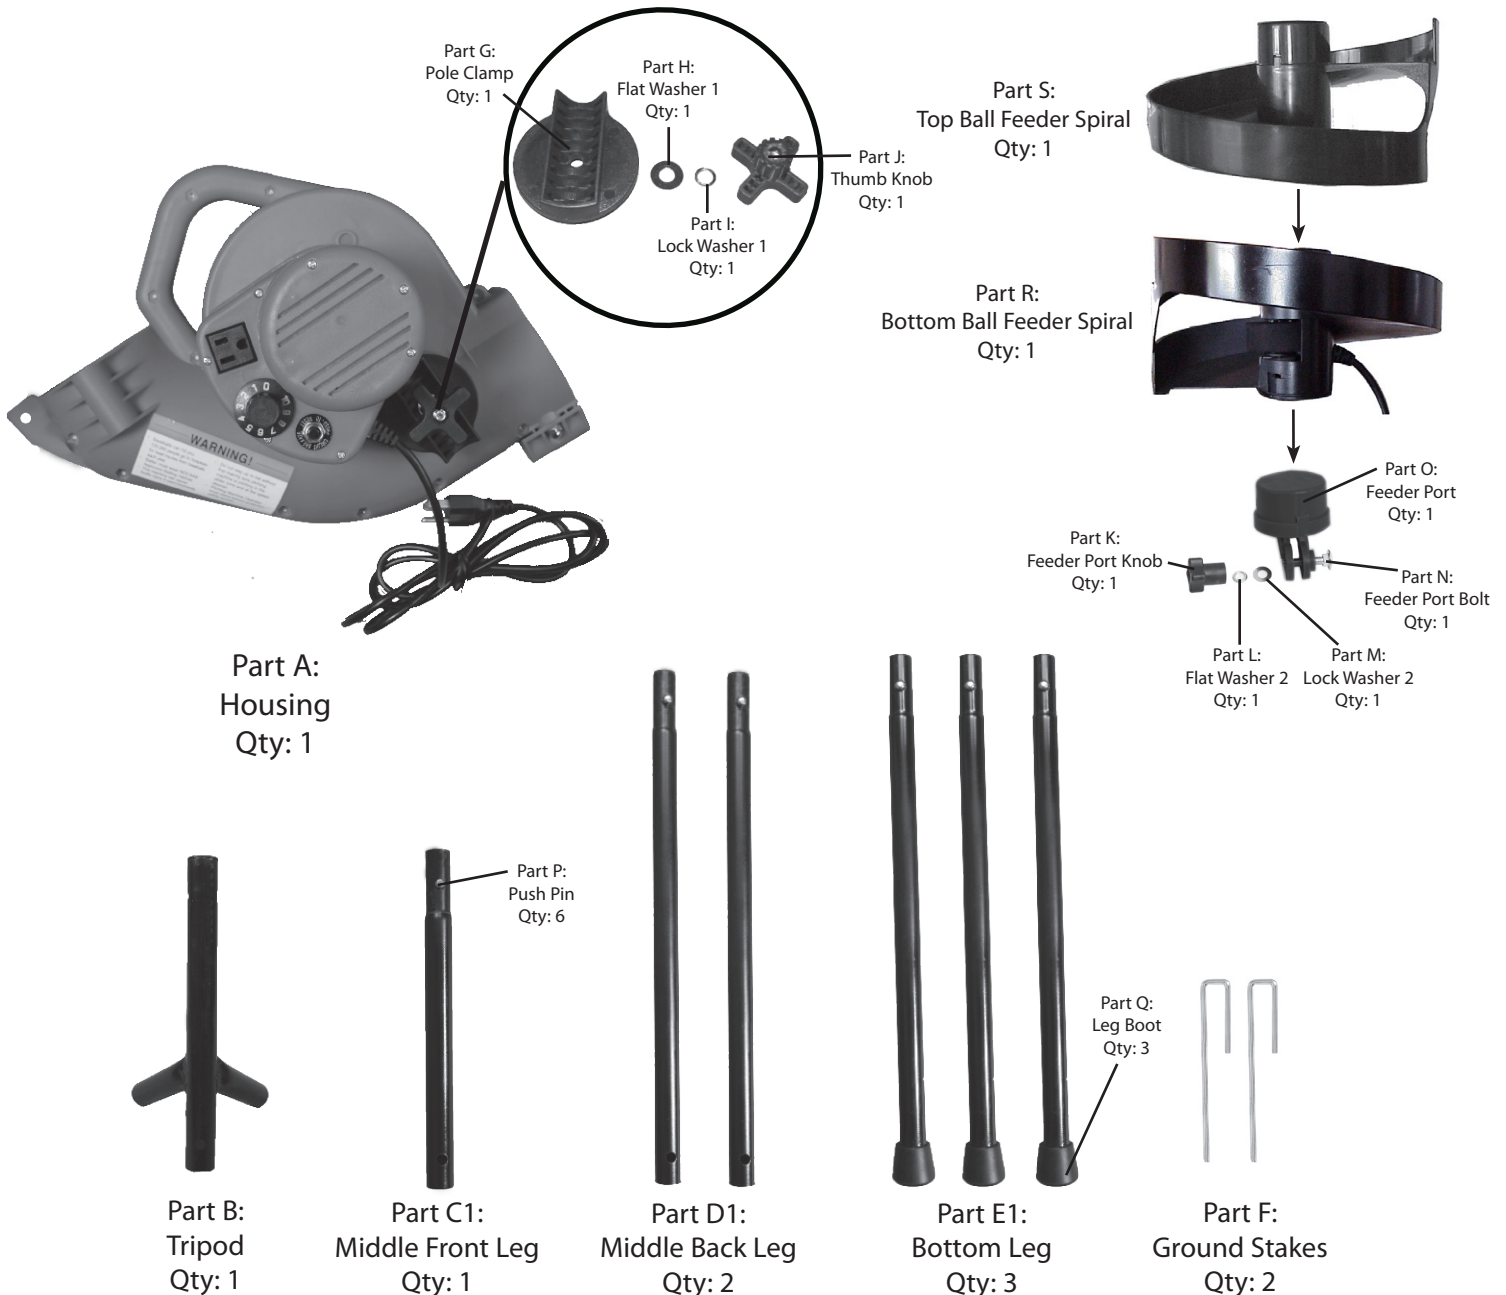

# Pre-Operating Instructions

## Check The Air Pressure In The BaseHit Pitching Machine Tire.

**Warning:** Make sure BaseHit Pitching Machine is unplugged and the tire is not spinning during these operations.

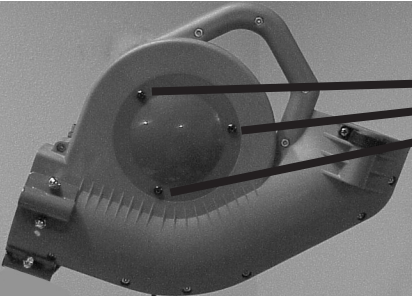


### Pre-Operation #1

Locate Allen Wrench (provided in package) and unscrew (3) three Wheel Cover Screws.


### Important:

**Periodically inspect the tire to make sure it is not worn out, flat, or punctured. Also make sure hub mark and tire mark are aligned to avoid balance problems. Serious damage could result if operated in any of these conditions.**

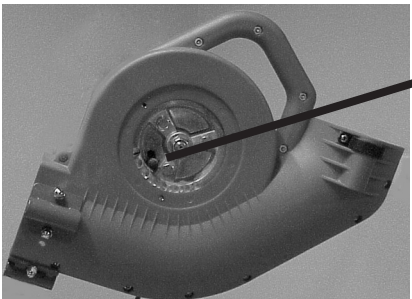

### Pre-Operation #2

Use a Tire Pressure Gauge and check tire air pressure. Tire pressure should be between 45 - 50 lbs. psi. If tire pressure reads low, use an air pump to inflate the tire to 45 - 50 lbs. psi. If tire pressure reads high, decrease the air pressure by pushing down the air stem bubble located in the middle of the air stem. •Inspect the air pressure periodically to make sure air pressure is still within the 45 - 50 lbs. psi range. •

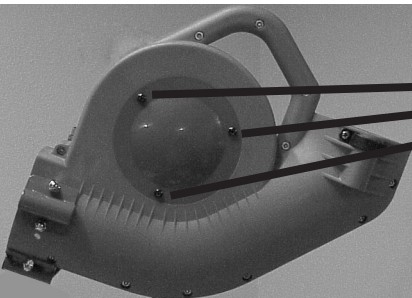

### Pre-Operation #3

Locate Allen Wrench (provided in package) and secure Wheel Cover back on machine by tightening (3) three Wheel Cover Screws.

**Warning - Serious Bodily Injury:** Never operate BaseHit Pitching Machine until Wheel Cover is secured with the (3) three Wheel Cover Screws.

## Check BaseHit Fuse Reset Button




### Fuse Reset Button


The BaseHit Pitching Machine has a fuse reset button which is designed to protect the electronic circuit in the BaseHit Pitching Machine. If the BaseHit will not turn on, check this button to make sure it is not popped out. If it is popped out, press it back in to reset the fuse circuit breaker. This should allow the BaseHit to operate properly.

# BASEHIT ASSEMBLY INSTRUCTIONS


**STEP 1:** Insert Middle Back Legs (D1) in to Sections 2 & 3 of Tripod (B), making sure the push pins (P) lock in place. Then insert Middle Front Leg (C1) in to Section 1 of Tripod (B), also making sure push pins (P) lock in place.

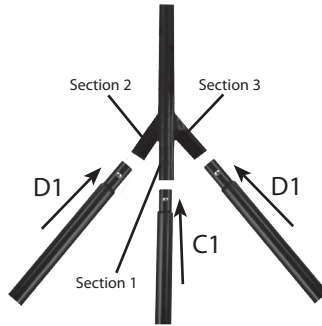

**STEP 2:** Insert Bottom Leg Assemblies (E1) in to Middle Back Legs (D1) and Middle Front Leg (C1)

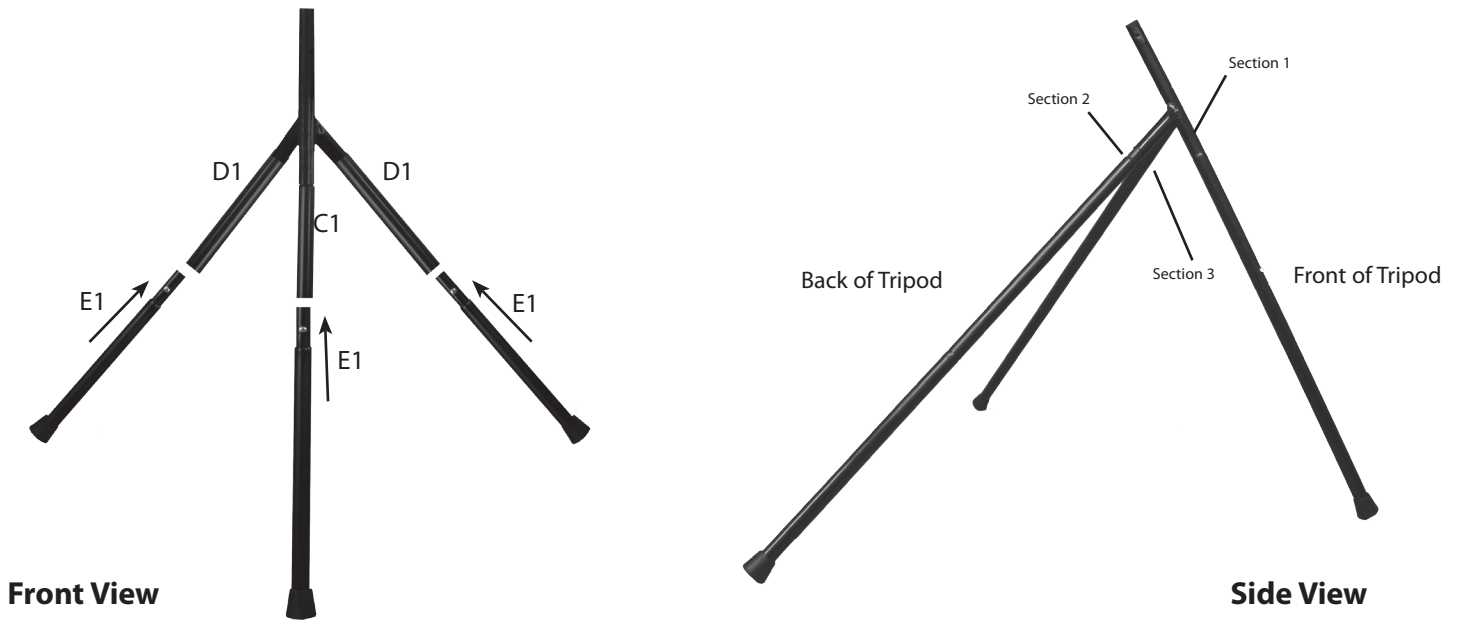


**STEP 3:** Attaching Machine to Tripod

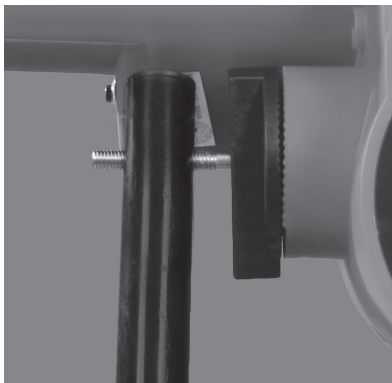

**A:** Position Tripod so section 1 is facing you.

Next, insert the Long Bolt attached to machine through the right side of the Tripod and out the other side.

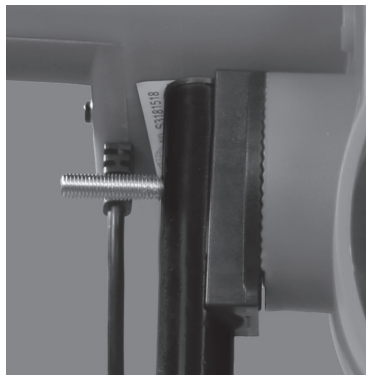


**B:** Slide the Machine Housing (A) close to the Tripod (B), making sure the Tripod (B) fits inside the Pole Clamp (I).



**C:** Slide Flat Washer (1st) and Lock Washer (2nd) on to the Long Bolt, then tighten the Thumb Knob (L) on to Long Bolt until machine is placed in the desired pitching position.

# BALL FEEDER ASSEMBLY INSTRUCTIONS

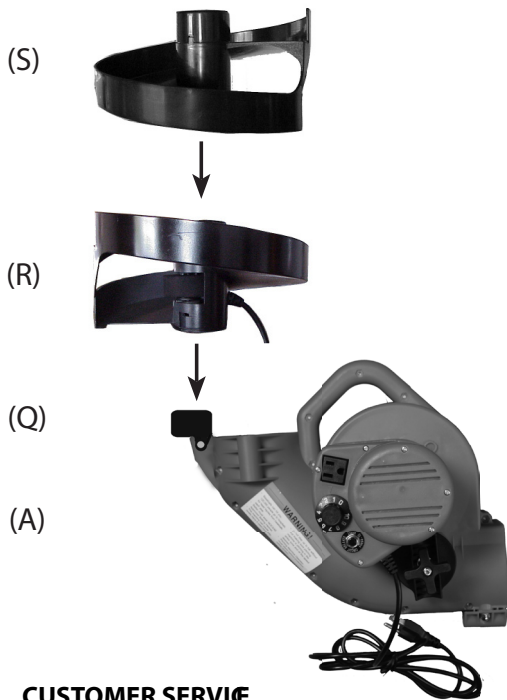

## INSTRUCTIONS

Slide Spiral Ball Feeder (R) on to Feeder Port (Q) on Housing (A). Slide Top Spiral (S) on to Feeder on top of Bottom Spiral (R). Plug in Spiral Ball Feeder Cord in to Ball Feeder Outlet located on the side of Housing (A).

### IMPORTANT

**DO NOT RETURN THIS PRODUCT TO THE RETAIL STORE WHERE PURCHASED. CALL TOLL FREE: (800) 492-9334.**

**WARNING: PITCHING MACHINES ARE TO BE USED BY ADULTS ONLY. MAKE SURE THE MACHINE IS TURNED OFF BEFORE ASSEMBLY! KEEP HANDS AND ALL BODY PARTS AWAY FROM BALL ENTRY AND EXIT! SERIOUS HAND, EYE, AND BODILY INJURY MAY OCCUR IF USED INCORRECTLY!**

### CUSTOMER SERVICE

Heater Sports is dedicated to your satisfaction. If you experience any trouble with the operation of any of our products, contact us at 1 (800) 492-9334 or log on to our website, [www.HeaterSports.com](http://www.HeaterSports.com).



### WARNING: USE BACK LEG STAKES

**BaseHit Movement:** The BaseHit may re-coil when a ball is pitched. This may cause the BaseHit to move slightly and hit a batter.

To stabilize the BaseHit, simply slide the hook of one Back Leg Stake (2X enclosed) over each of the two back legs of the BaseHit and pound each stake into the ground. This will stabilize the movement of the Pitching Machine and eliminate re-coil movement.





# BaseHit™

## Baseball Pitching Machine Instructions

### **WARNING! WARNING! WARNING!**

**USE REAL BASEBALLS IN THIS MACHINE AT YOUR OWN RISK!**

**IT IS RECOMMENDED THAT YOU ONLY USE DIMPLED PITCHING MACHINE BASEBALLS TO PITCH TO BATTERS. PITCHING MACHINES THAT USE A WHEEL TO THROW BASEBALLS WILL THROW REAL BASEBALLS INACCURATELY BECAUSE OF THE SEAMS ON THE BALL AND MAY HIT A BATTER AND CAUSE PHYSICAL INJURY!**

**IMPORTANT: THIS PRODUCT IS TO BE USED BY ADULTS ONLY. MAKE SURE MACHINE IS TURNED OFF BEFORE ASSEMBLY! KEEP HANDS AND ALL BODY PARTS AWAY FROM BALL EXIT! SERIOUS HAND AND BODILY INJURY MAY RESULT IF USED INCORRECTLY!**

**MAKE SURE EVERY PERSON AND EVERYTHING IS CLEAR OF PITCHING MACHINE BALL PATH!**

**TURN PITCHING MACHINE VARIABLE SPEED CONTROL KNOB OFF (COUNTER CLOCKWISE UNTIL IT CLICKS) TO THE "0" POSITION WHILE REFILLING THE BALL FEEDER OR RETRIEVING BALLS!**

**MAKE SURE MACHINE IS PITCHING AT DESIRED TARGET BEFORE ALLOWING BATTER TO START BATTING!**

**POWER CORDS OVER 20 FT. CAN CAUSE MACHINE TO LOSE ENERGY & NOT OPERATE PROPERLY!**

### **WARNING!**

- Do not put hands or fingers in pitching machine.
- Make sure all persons are clear of the ball path and away from pitching machine before pitching any ball.
- Make sure you pitch only one ball at a time.
- Make sure all balls are out of machine before turning the pitching machine on.
- Do not stand in front of pitching machine.
- Do not operate in moisture.
- This machine can cause serious bodily injury if used incorrectly.
- For adult operation only.
- Batter must wear NOCSAE Approved Batting Helmet.

### **WARNING!**

- Only use dimpled pitching machine balls to pitch to batters. Pitching machines that use a wheel to throw balls will throw real balls inaccurately because of the seams on the ball and may hit a batter and cause physical injury.
- Always have legs set on the on the ground before pitching to a batter or the BaseHit Pitching Machine may move and hit the batter causing serious physical injury.
- Make sure you pitch only one ball at a time.
- Pitching Machine Operator must stand behind protective safety screen.

### **BASEHIT SPEED CONTROL DIAL SPEEDS**

**Knob Setting = 10, Est. Speed = 45 MPH • Knob Setting = 5, Est. Speed = 26 MPH  
Knob Setting = 9, Est. Speed = 42 MPH • Knob Setting = 4, Est. Speed = 22 MPH  
Knob Setting = 8, Est. Speed = 38 MPH • Knob Setting = 3, Est. Speed = 18 MPH  
Knob Setting = 7, Est. Speed = 34 MPH • Knob Setting = 2, Est. Speed = 14 MPH  
Knob Setting = 6, Est. Speed = 30 MPH • Knob Setting = 0, Est. Speed = 0 MPH**