

Read This Before Operating The Crusher



IMPORTANT

DO NOT RETURN THE CRUSHER MACHINE TO THE RETAIL STORE WHERE PURCHASED. CALL TOLL FREE: (800) 492-9334.

CUSTOMER SERVICE

TREND SPORTS is dedicated to your customer satisfaction. If you experience any trouble with the operation of the Crusher Pitching Machine contact us at: (800) 492-9334 or log on to our website at <http://www.TrendSports.com>.

CRUSHER BALL RECOMMENDATION

The accuracy of the Crusher Portable Pitching Machine depends on the quality of the balls used. Trend Sports recommends only using official Crusher balls in your Crusher Portable Pitching Machine. These balls are incredibly accurate, long lasting, and produce the fastest ball speed.

WARNING: THIS PRODUCT IS TO BE USED BY ADULTS ONLY. MAKE SURE MACHINE IS TURNED OFF BEFORE ASSEMBLY! KEEP HANDS AND ALL BODY PARTS AWAY FROM BALL ENTRY AND EXIT! SERIOUS HAND, EYE, AND BODILY INJURY MAY OCCUR IF USED INCORRECTLY!





- Please be sure to read all of the instructions before using the Crusher Portable Pitching Machine to insure the machine is working properly.
- Parents: Your child should be made aware of the potential dangers when using the Crusher Portable Pitching Machine.
- Never put your fingers into the Crusher while it is operating.
- The Crusher is not a toy and an adult should supervise children. It is very important that the batter make sure the area is clear before swinging bat.
- Stay clear of the ball opening while the Crusher is operating. Although the balls are very light, they are made of hard plastic, and eye damage or other injury may occur. Children must be advised of this danger and appropriate precautions should be taken.
- **DO NOT** use any type of ball other than the Crusher balls provided, such as regular golf ball or nerf-type ball. The used of one of these balls may result in jamming the Crusher and leaving it inoperable.

WARNING!

Stay clear of ball exit when machine is operating. Severe eye damage or bodily harm may result. Use under adult supervision only.

- Occasionally a ball will not fall properly. **DO NOT LOOK INTO THE FRONT HOLE WHILE THE CRUSHER IS RUNNING** to see where it is. The following ball may push it out and cause eye injury. If the next ball does not push it through, then turn the Crusher off before attempting to find the ball. You should be able to dislodge the ball easily by tilting the Crusher forward to eject the ball.

CRUSHER PARTS LIST

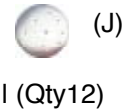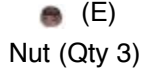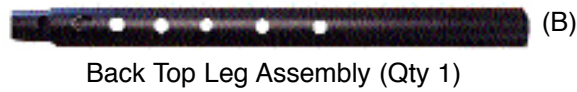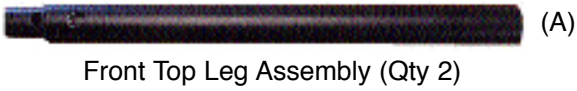

CRUSHER ASSEMBLY

STEP 1: Extend Part (A).



STEP 2: Slide Part (C) into Part (A) and insert push-pin into hole in Part (A) (2X).




STEP 3: Extend Part (B).




STEP 4: Slide Part (C) into Part (B) and insert push-pin into hole in Part (A) (1X).



STEP 5: Slide the leg assemblies into the Tri-Pod Base (F) slots.

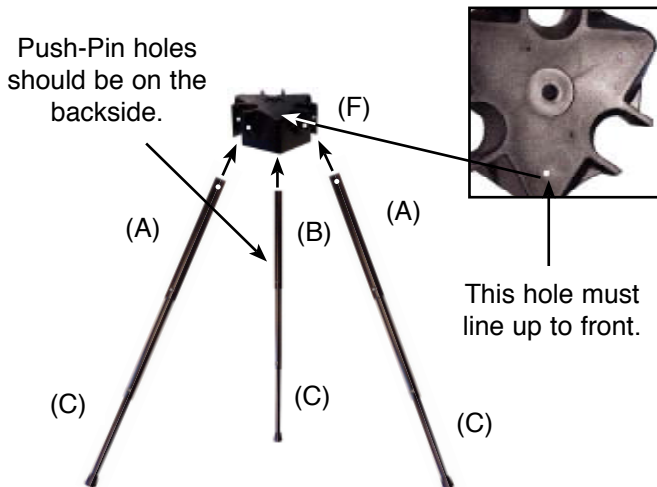


STEP 6: Slide Part (D) (3X) through the holes in the Tri-Pod Base (F) slot holes and tighten nut (E) (3X).

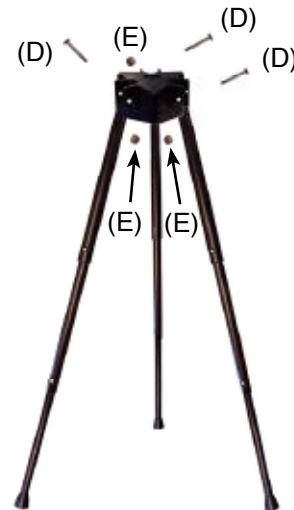


Model# CH99

CRUSHER ASSEMBLY (Continued)

STEP 5: Align the nipple of Part (I) with the hole in Part (F) and set Part (I) on Part (F).

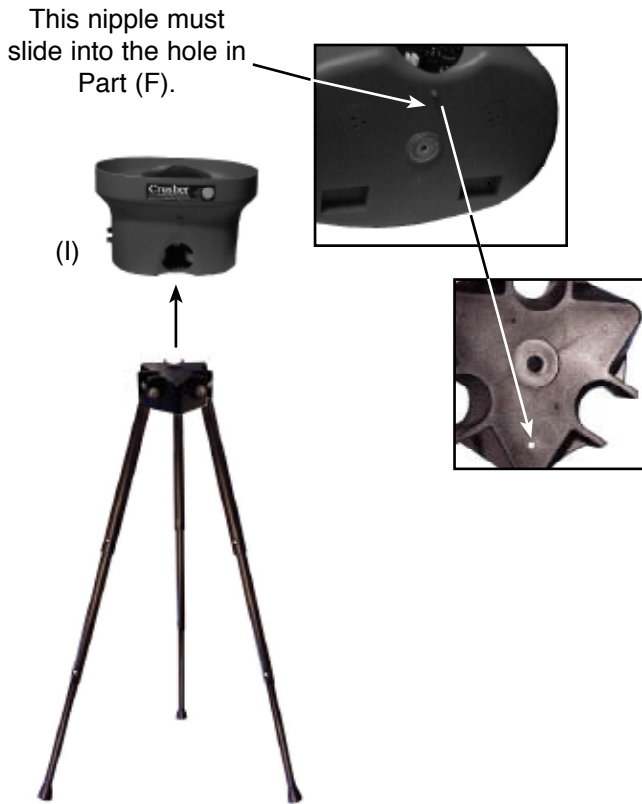

STEP 6: Slide Part (G) through the center hole in the Tri-Pod Base (F) and screw into threaded hole in Part (I).

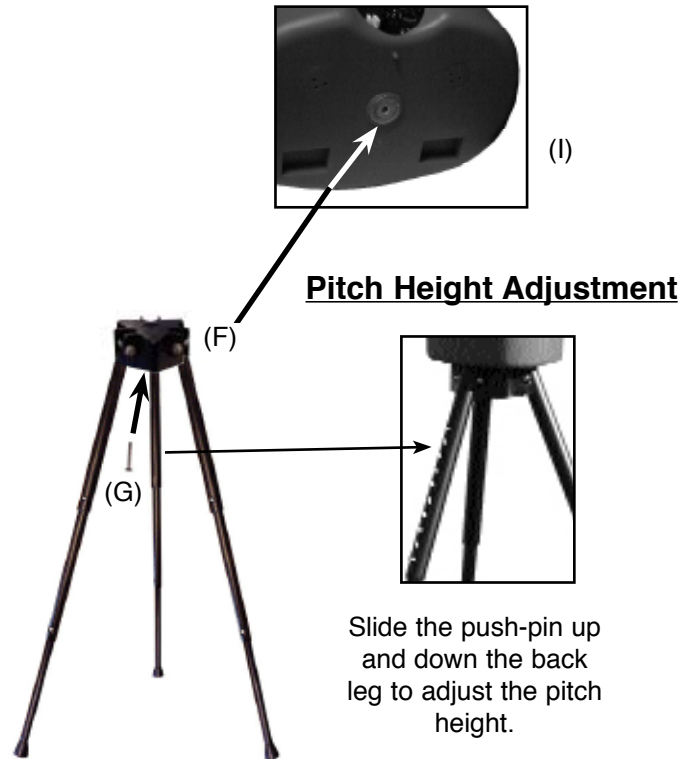

Crusher Controls

- 2-Speed Auto-Ball Switch
- Left Motor Variable Speed Control Knob
- Right Motor Variable Speed Control Knob
- Charger Plug-In

STEP 8: ** IMPORTANT ******

The Left & Right Variable Speed Control Knobs adjust the speed of each motor in the Crusher. If both knobs are all the way up, the motors might not spin at exactly the same rate. This may cause the machine to pitch fast balls inaccurately. To correct this problem, turn the knob on the faster spinning motor down so it is spinning at the same rate as the other motor. This will make the balls pitch accurately. For left & right curve balls, adjust one motor to spin slower than the other.

STEP 7: Make sure the Crusher is turned off. Slide the end of Part (H) into the A/C Plug-In in Part (I). Plug the A/C Plug receptacle into a wall socket.



Do not use any A/C Plug Adapter other than the one provided with the Crusher.

2 hour and 4 hour battery packs are available to turn your Crusher into a portable battery operated machine.

Make Your Crusher Battery Operated
Call 1-800-492-9334 to order a 2 hour or 4 hour battery pack for your Crusher Pitching Machine.